

1 Quick Guide

1

1.1 Safety

1.1.1 Warnings

	<p>High Voltage Warning: The voltage of the frequency converter is dangerous whenever it is connected to mains. Incorrect installation of the motor or frequency converter may cause damage to the equipment, serious injury or death. Consequently, it is essential to comply with the instructions in this manual as well as local and national rules and safety regulations.</p>
	<p>Warning: Touching the electrical parts may be fatal - even after the equipment has been disconnected from mains. Also make sure that other voltage inputs have been disconnected (linkage of DC intermediate circuit). Be aware that there may be high voltage on the DC link even when the LEDs are turned off. Before touching any potentially live parts of the frequency converter, wait at least 4 minutes for all M1, M2 and M3 sizes. Wait at least 15 minutes for all M4 and M5 sizes.</p>
	<p>Leakage Current: The earth leakage current from the frequency converter exceeds 3.5 mA. According to IEC 61800-5-1 a reinforced Protective Earth connection must be ensured by means of a min. 10mm² Cu or an additional PE wire - with the same cable cross section as the Mains wiring - must be terminated separately.</p> <p>Residual Current Device: This product can cause a DC current in the protective conductor. Where a residual current device (RCD) is used for extra protection, only an RCD of Type B (time delayed) shall be used on the supply side of this product. See also Danfoss Application Note on RCD, MN.90.GX.YY. Protective earthing of the frequency converter and the use of RCDs must always follow national and local regulations.</p>
	<p>Motor Thermal Protection: Motor overload protection is possible by setting Parameter 1-90 Motor thermal protection to the value ETR trip. For the North American market: Implemented ETR function provide class 20 motor overload protection, in accordance with NEC.</p>
	<p>Installation in high altitudes: For altitudes above 2 km, please contact Danfoss regarding PELV.</p>

1.1.2 Safety Instructions

- Make sure the frequency converter is properly connected to earth.
- Do not remove mains connections, motor connections or other power connections while the frequency converter is connected to power.
- Protect users against supply voltage.
- Protect the motor against overloading according to national and local regulations.
- The earth leakage current exceeds 3.5 mA.
- The [OFF] key is not a safety switch. It does not disconnect the frequency converter from mains.

1

1.2 Introduction

1.2.1 Available Literature



This quick guide contains the basic information necessary for installing and running the drive.

If more information is needed, the literature below can be downloaded from:
<http://www.danfoss.com/BusinessAreas/DrivesSolutions/Documentations>

Title	Literature no.
VLT Micro Drive FC 51 Operating Instructions	MG.02.AX.YY
VLT Micro Drive FC 51 Quick Guide	MG.02.BX.YY
VLT Micro Drive FC 51 Programming Guide	MG.02.CX.YY
FC 51 LCP Mounting Instruction	MI.02.AX.YY
FC 51 De-coupling Plate Mounting Instruction	MI.02.BX.YY
FC 51 Remote Mounting Kit Mounting Instruction	MI.02.CX.YY
FC 51 DIN Rail Kit Mounting Instruction	MI.02.DX.YY
FC 51 IP21 Kit Mounting Instruction	MI.02.EX.YY
FC 51 Nema1 Kit Mounting Instruction	MI.02.FX.YY

X = Revision Number, Y = Language code

1.2.2 Approvals



1.2.3 IT Mains



IT Mains

Installation on isolated mains source, i.e. IT mains.
 Max. supply voltage allowed when connected to mains: 440 V.

As an option, Danfoss offers recommended line filters for improved harmonics performance.

1.2.4 Avoid unintended Start

While the frequency converter is connected to mains, the motor can be started/stopped using digital commands, bus commands, references or via the Local Control Panel.

- Disconnect the frequency converter from mains whenever personal safety considerations make it necessary to avoid unintended start of any motors.
- To avoid unintended start, always activate the [OFF] key before changing parameters.

1.2.5 Disposal Instruction



Equipment containing electrical components must not be disposed of together with domestic waste. It must be separately collected with electrical and electronic waste according to local and currently valid legislation.

1.3 Installation

1.3.1 Before Commencing Repair Work

1. Disconnect FC 51 from mains (and external DC supply, if present.)
2. Wait for 4 minutes (M1, M2 and M3) and 15 minutes (M4 and M5) for discharge of the DC-link.
3. Disconnect DC bus terminals and brake terminals (if present)
4. Remove motor cable

1.3.2 Side-by-Side Installation

The frequency converter can be mounted side-by-side for IP 20 rating units and requires 100 mm clearance above and below for cooling. Please refer to the specifications near the end of this document for details on environmental ratings of the frequency converter.

1.3.3 Mechanical Dimensions

A template for drilling can be found on the flap of the packaging.

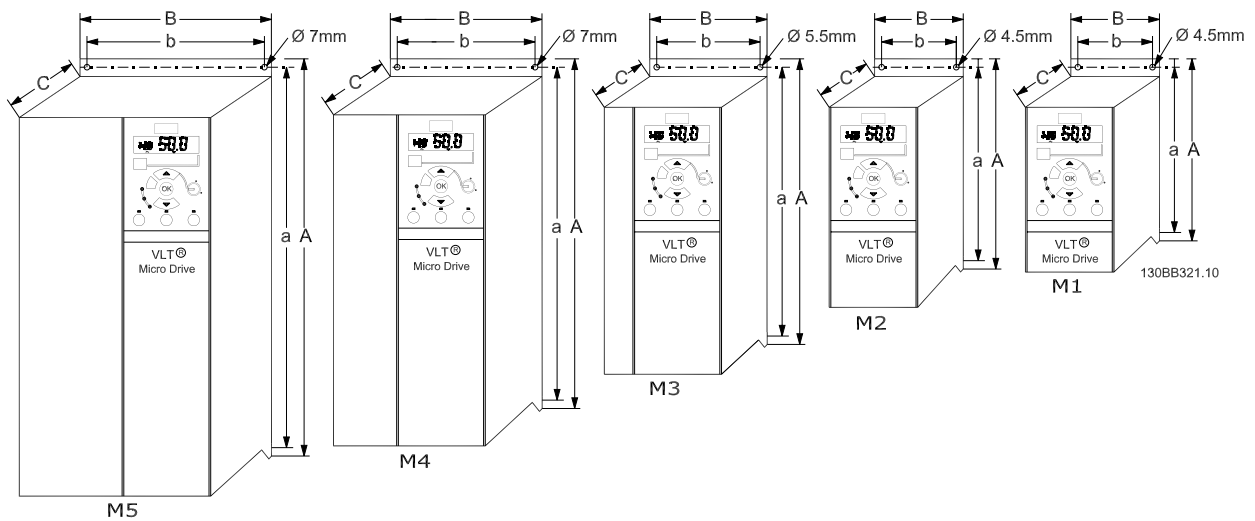


Illustration 1.1: Mechanical dimensions.

Frame	Power (kW)			Height (mm)			Width (mm)		Depth ¹⁾ (mm)	Max. Weight
	1 X 200-240 V	3 X 200 -240 V	3 X 380-480 V	A	A (incl. decoupling plate)	a	B	b	C	Kg
M1	0.18 - 0.75	0.25 - 0.75	0.37 - 0.75	150	205	140.4	70	55	148	1.1
M2	1.5	1.5	1.5 - 2.2	176	230	166.4	75	59	168	1.6
M3	2.2	2.2 -3.7	3.0 - 7.5	239	294	226	90	69	194	3.0
M4			11.0-15.0	292	347.5	272.4	125	97	241	6.0
M5			18.5-22.0	335	387.5	315	165	140	248	9.5

¹⁾ For LCP with potentiometer, please add 7.6 mm.

Table 1.1: Mechanical Dimensions

1.3.4 Electrical Installation in General

1



All cabling must comply with national and local regulations on cable cross-sections and ambient temperature. Copper conductors required, (60-75° C) recommended.

Details of terminal tightening torques.

Frame	Power (kW)			Torque (Nm)					
	1 x 200-240 V	3 x 200-240 V	3 x 380-480 V	Line	Motor	DC connection/Brake	Control Terminals	Earth	Relay
M1	0.18 - 0.75	0.25 - 0.75	0.37 - 0.75	1.4	0.7	Spade ¹⁾	0.15	3	0.5
M2	1.5	1.5	1.5 - 2.2	1.4	0.7	Spade ¹⁾	0.15	3	0.5
M3	2.2	2.2 - 3.7	3.0 - 7.5	1.4	0.7	Spade ¹⁾	0.15	3	0.5
M4			11.0-15.0	1.25	1.25	1.25	0.15	3	0.5
M5			18.5-22.0	1.25	1.25	1.25	0.15	3	0.5

¹⁾ Spade connectors (6.3 mm Faston plugs)

Table 1.2: Tightening of terminals.

1.3.5 Fuses

Branch circuit protection:

In order to protect the installation against electrical and fire hazard, all branch circuits in an installation, switch gear, machines etc., must be short-circuited and overcurrent protected according to national/international regulations.

Short circuit protection:

Danfoss recommends using the fuses mentioned in the following tables to protect service personnel or other equipment in case of an internal failure in the unit or short-circuit on DC-link. The frequency converter provides full short circuit protection in case of a short-circuit on the motor or brake output.

Overcurrent protection:

Provide overload protection to avoid overheating of the cables in the installation. Overcurrent protection must always be carried out according to national regulations. Fuses must be designed for protection in a circuit capable of supplying a maximum of 100,000 A_{rms} (symmetrical), 480 V maximum.

Non UL compliance:

If UL/cUL is not to be complied with, Danfoss recommends using the fuses mentioned in the below table, which will ensure compliance with EN50178/IEC61800-5-1:

In case of malfunction, not following the fuse recommendation may result in damage to the frequency converter.

FC 51	UL						Max. fuses non UL
	Bussmann	Bussmann	Bussmann	Littel fuse	Ferraz-Shawmut	Ferraz-Shawmut	
1 x 200-240 V							
kW	Type RK1	Type J	Type T	Type RK1	Type CC	Type RK1	Type gG
0K18 - 0K37	KTN-R15	JKS-15	JJN-15	KLN-R15	ATM-R15	A2K-15R	16A
0K75	KTN-R25	JKS-25	JJN-25	KLN-R25	ATM-R25	A2K-25R	25A
1K5	KTN-R35	JKS-35	JJN-35	KLN-R35	-	A2K-35R	35A
2K2	KTN-R45	JKS-45	JJN-45	KLN-R45	-	A2K-45R	40A
3 x 200-240 V							
0K25	KTN-R10	JKS-10	JJN-10	KLN-R10	ATM-R10	A2K-10R	10A
0K37	KTN-R15	JKS-15	JJN-15	KLN-R15	ATM-R15	A2K-15R	16A
0K75	KTN-R20	JKS-20	JJN-20	KLN-R20	ATM-R20	A2K-20R	20A
1K5	KTN-R25	JKS-25	JJN-25	KLN-R25	ATM-R25	A2K-25R	25A
2K2	KTN-R40	JKS-40	JJN-40	KLN-R40	ATM-R40	A2K-40R	40A
3K7	KTN-R40	JKS-40	JJN-40	KLN-R40	-	A2K-40R	40A
3 x 380-480 V							
0K37 - 0K75	KTS-R10	JKS-10	JJS-10	KLS-R10	ATM-R10	A6K-10R	10A
1K5	KTS-R15	JKS-15	JJS-15	KLS-R15	ATM-R15	A2K-15R	16A
2K2	KTS-R20	JKS-20	JJS-20	KLS-R20	ATM-R20	A6K-20R	20A
3K0	KTS-R40	JKS-40	JJS-40	KLS-R40	ATM-R40	A6K405R	40A
4K0	KTS-R40	JKS-40	JJS-40	KLS-R40	ATM-R40	A6K-40R	40A
5K5	KTS-R40	JKS-40	JJS-40	KLS-R40	-	A6K-40R	40A
7K5	KTS-R40	JKS-40	JJS-40	KLS-R40	-	A6K-40R	40A
11K0	KTS-R60	JKS-60	JJS-60	KLS-R60	-	A6K-60R	63A
15K0	KTS-R60	JKS-60	JJS-60	KLS-R60	-	A6K-60R	63A
18K5	KTS-R60	JKS-60	JJS-60	KLS-R60	-	A6K-60R	80A
22K0	KTS-R60	JKS-60	JJS-60	KLS-R60	-	A6K-60R	80A

Table 1.3: Fuses

1.3.6 Connecting to Mains and Motor

The frequency converter is designed to operate all standard three-phased asynchronous motors.

The frequency converter is designed to accept mains/motor cables with a maximum cross-section of 4 mm²/10 AWG (M1, M2 and M3) and maximum cross-section 16 mm²/6 AWG (M4 and M5).

- Use a shielded/armored motor cable to comply with EMC emission specifications, and connect this cable to both the decoupling plate and the motor metal.
- Keep motor cable as short as possible to reduce the noise level and leakage currents.
- For further details on mounting of the decoupling plate, please see instruction MI.02.BX.YY.
- Also see EMC-Correct Installation in Operating Instruction MG.02.AX.YY.

Step 1: First, mount the earth wires to earth terminal.

Step 2: Connect motor to terminals U, V and W.

Step 3: Mount mains supply to terminals L1/L, L2 and L3/N (3-phase) or L1/L and L3/N (single-phase) and tighten.

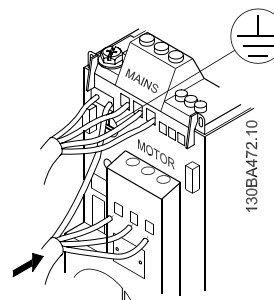


Illustration 1.2: Mounting of earth cable, mains and motor wires.

1.3.7 Control Terminals

All control cable terminals are located underneath the terminal cover in front of the frequency converter. Remove the terminal cover using a screwdriver.

See back of terminal cover for outlines of control terminals and switches.

Do not operate switches with power on the frequency converter. Parameter 6-19 must be set according to Switch 4 position.

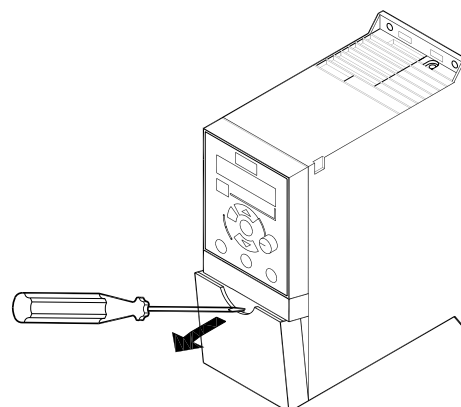


Illustration 1.3: Removing terminal cover.

Switch 1:	*OFF = PNP terminals 29 ON = NPN terminals 29
Switch 2:	*OFF = PNP terminal 18, 19, 27 and 33 ON = NPN terminal 18, 19, 27 and 33
Switch 3:	No function
Switch 4:	*OFF = Terminal 53 0 - 10 V ON = Terminal 53 0/4 - 20 mA

* = default setting

Table 1.4: Settings for S200 Switches 1-4

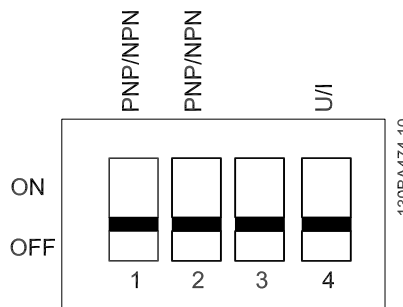


Illustration 1.4: S200 Switches 1-4.

The illustration below shows all control terminals of the frequency converter. Applying Start (term. 18) and an analog reference (term. 53 or 60) make the frequency converter run.

1

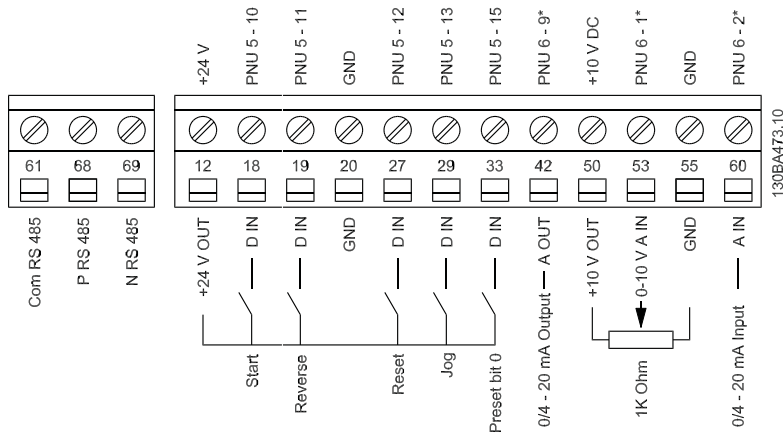


Illustration 1.5: Overview of control terminals in PNP-configuration and factory setting.

1.3.8 Power Circuit - Overview

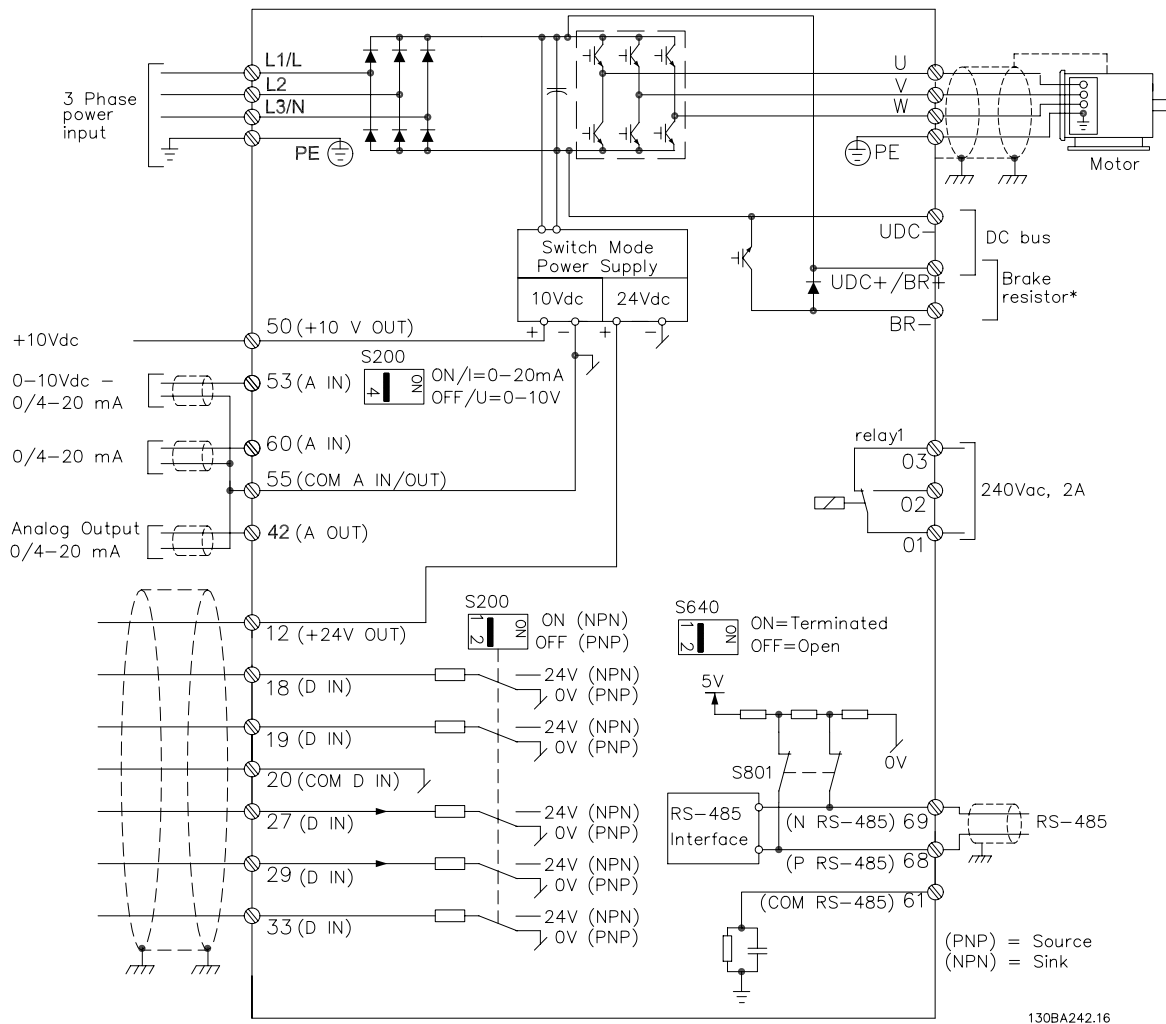


Illustration 1.6: Diagram showing all electrical terminals.

* Brake (BR+ and BR-) are not applicable for frame M1.

Brake resistors are available from Danfoss.
Improved power factor and EMC performance can be achieved by installing optional Danfoss line filters.
Danfoss power filters can also be used for load sharing.

1

1.3.9 Load sharing/Brake

Use 6.3 mm insulated Faston Plugs designed for high voltage for DC (Load Sharing and brake).
Contact Danfoss or see instruction no. MI.50.Nx.02 for load sharing and instruction no. MI.90.Fx.02 for brake.

Load sharing: Connect terminals -UDC and +UDC/+BR.

Brake: Connect terminals -BR and +UDC/+BR (Not applicable for frame M1).



Note that voltage levels of up to 850 V DC may occur between terminals +UDC/+BR and -UDC. Not short circuit protected.

1

1.4 Programming

1.4.1 Programming with LCP

For detailed information on programming, please see *Programming Guide*, MG.02.CX.YY.

**NB!**

The frequency converter can also be programmed from a PC via RS485 com-port by installing the MCT-10 Set-up Software.

This software can either be ordered using code number 130B1000 or downloaded from the Danfoss Web site: www.danfoss.com/BusinessAreas/DrivesSolutions/softwaredownload

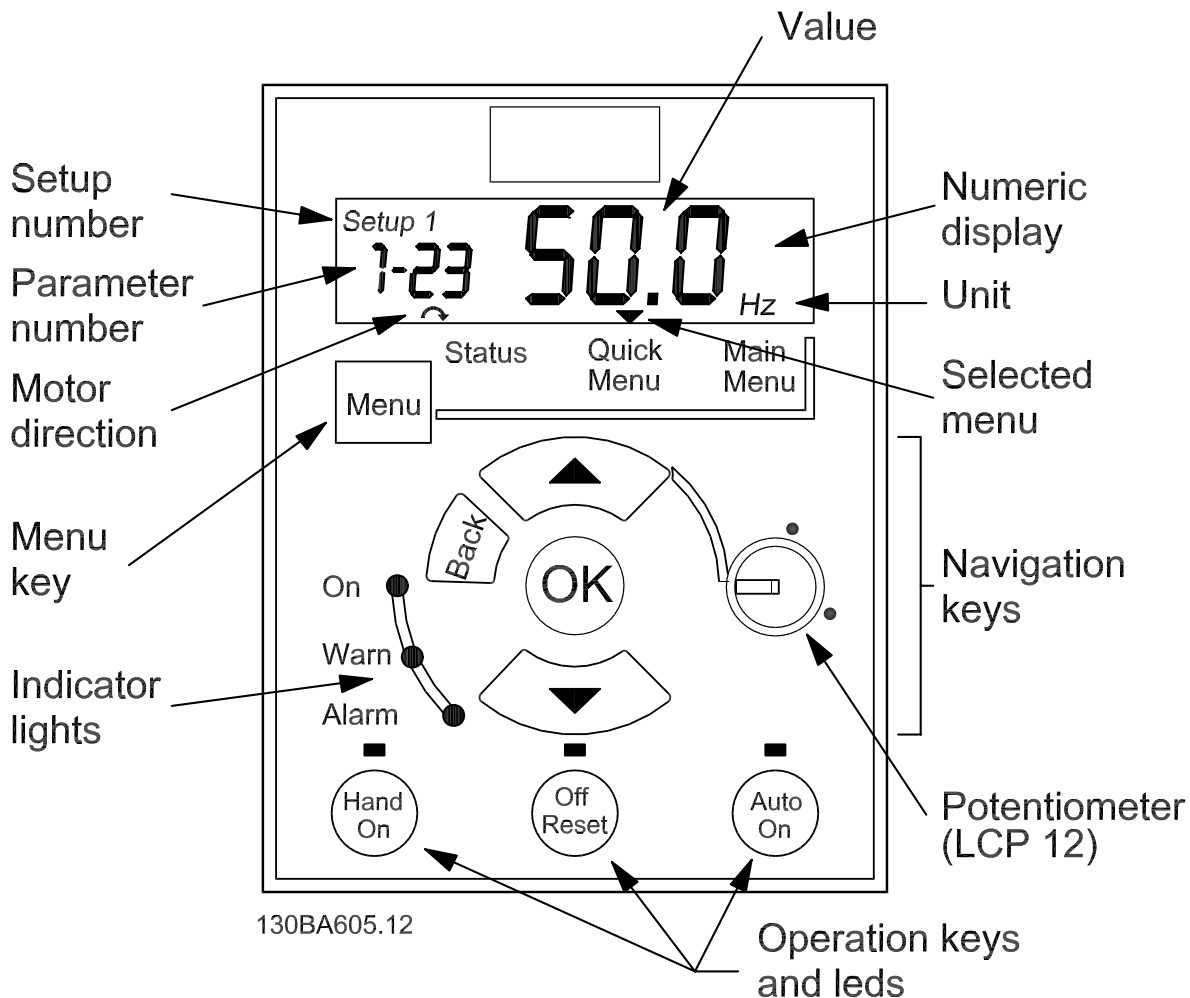


Illustration 1.7: Description of LCP buttons and display

Use the [MENU] key to select one of the following menus:

Status:

For readouts only.

Quick Menu:

For access to Quick Menus 1 and 2, respectively.

Main Menu:

For access to all parameters.

Navigation Keys:

[Back]: For moving to the previous step or layer in the navigation structure.

Arrows [▲] [▼]: For manoeuvring between parameter groups, parameters and within parameters.

[OK]: For selecting a parameter and for accepting changes to parameter settings.

Operation Keys:

A yellow light above the operation keys indicates the active key.

[Hand on]: Starts the motor and enables control of the frequency converter via the LCP.

[Off/Reset]: Stops the motor (off). If in alarm mode the alarm will be reset.

[Auto on]: The frequency converter is controlled either via control terminals or serial communication.

[Potentiometer] (LCP12): The potentiometer works in two ways depending on the mode in which the frequency converter is running.

In *Auto Mode* the potentiometer acts as an extra programmable analog input.

In *Hand on Mode* the potentiometer controls local reference.

Arrows [▲] and [▼] toggles between the choices in each menu.

The display indicates the status mode with a small arrow above "Status".

The Quick Menu gives easy access to the most frequently used parameters.

1. To enter the Quick Menu, press [MENU] key until indicator in display is placed above *Quick Menu*.
2. Use [▲] [▼] to select either QM1 or QM2, then press [OK].
3. Use [▲] [▼] to browse through the parameters in the Quick Menu.
4. Press [OK] to select a parameter.
5. Use [▲] [▼] to change the value of a parameter setting.
6. Press [OK] to accept the change.
7. To exit, press either [Back] twice to enter *Status*, or press [Menu] once to enter *Main Menu*.

No	Name	Range	Default	Function
1-20	Motor Power [kW]/[HP]	[0.09kW/0.12HP -30kW/40HP]	Unit dependent	Enter motor power from nameplate data
1-22	Motor Voltage	[50 - 999V]	230/400	Enter motor voltage from nameplate data
1-23	Motor Frequency	[20 - 400 Hz]	50	Enter motor frequency from nameplate data
1-24	Motor Current	[0.01 - 100.00 A]	Unit dependent	Enter motor current from nameplate data
1-25	Motor nominal speed	[100 - 9999 RPM]	Unit dependent	Enter motor nominal speed from nameplate data
1-29	Automatic Motor Tuning (AMT)	[0] = off [2] = Enable AMT	[0] = off	Use AMT to optimize motor performance. 1. Stop VLT 2. Choose [2] 3. "Hand On"
3-02	Minimum reference	[-4999 - 4999]	0	Enter value for minimum reference
3-03	Maximum reference	[-4999 - 4999]	50.00	Enter value for maximum reference
3-41	Ramp up time 1	[0.05 - 3600s]	3.00 (10.00 ¹⁾)	Ramp up time from 0 to rated motor frequency par. 1-23
3-42	Ramp down time 1	[0.05 - 3600s]	3.00 (10.00 ¹⁾)	Ramp down time from rated motor frequency par. 1-23 to 0

¹⁾ M4 and M5 only

Table 1.5: Basic Settings Quick Menu 1

The Main Menu gives access to all parameters.

1. To enter the Main Menu, press [MENU] key until indicator in display is placed above *Main Menu*.
2. Use [▲] [▼] to browse through the parameter groups.
3. Press [OK] to select a parameter group.
4. Use [▲] [▼] to browse through the parameters in the specific group.
5. Press [OK] to select the parameter.
6. Use [▲] [▼] to set/change the parameter value.
7. Press [OK] to accept the value.
8. To exit, press either [Back] twice to enter *Quick Menu*, or press [Menu] once to enter *Status*.

1.5 Parameter Overview

Parameter Overview	
0-XX Operation/Display	1-XX Load/Motor
0-0X Basic Settings	1-0X General Settings
0-03 Regional Settings	1-00 Configuration Mode
*[0] International	*[0] Speed open loop
[1] US	[3] Process
0-04 Oper. State at Power-up (Hand)	1-01 Motor Control Principle
[0] Resume	[0] U/f
*[1] Forced stop, ref = old	*[1] VVC+
[2] Forced stop, ref = 0	1-03 Torque Characteristics
0-7X Set-up Handling	*[0] Constant torque
0-10 Active Set-up	[2] Automatic Energy Optim.
*[1] Setup 1	1-05 Local Mode Configuration
[2] Setup 2	[0] Speed Open Loop
[9] Multi Setup	*[2] As config in par. 1-00
0-11 Edit Set-up	1-2X Motor Data
*[1] Setup 1	1-20 Motor Power [kW] [HP]
[2] Setup 2	[1] 0.09 kW/0.12 HP
[9] Active Setup	[2] 0.12 kW/0.16 HP
0-12 Link Setups	[3] 0.18 kW/0.25 HP
[0] Not Linked	[4] 0.25 kW/0.33 HP
*[20] Linked	[5] 0.37 kW/0.50 HP
0-31 Custom Readout Min Scale	[6] 0.55 kW/0.75 HP
0.00 - 9999.00 * 0.00	[7] 0.75 kW/1.00 HP
0-32 Custom Readout Max Scale	[8] 1.10 kW/1.50 HP
0.00 - 9999.00 * 100.0	[9] 1.50 kW/2.00 HP
0-4X LCP Keypad	[10] 2.20 kW/3.00 HP
0-40 [Hand on] Key on LCP	[11] 3.00 kW/4.00 HP
[0] Disabled	[12] 3.70 kW/5.00 HP
*[1] Enabled	[13] 4.00 kW/5.40 HP
0-41 [Off / Reset] Key on LCP	[14] 5.50 kW/7.50 HP
[0] Disable All	[15] 7.50 kW/10.00 HP
*[1] Enable All	[16] 11.00 kW/15.00 HP
[2] Enable Reset Only	[17] 15.00 kW/20.00 HP
0-42 [Auto on] Key on LCP	[18] 18.50 kW/25.00 HP
[0] Disabled	[19] 22.00 kW/29.50 HP
*[1] Enabled	[20] 30.00 kW/40.00 HP
0-5X Copy/Save	1-22 Motor Voltage
0-50 LCP Copy	50 - 999 V * 230 - 400 V
*[0] No copy	1-23 Motor Frequency
[1] All to LCP	20 - 400 Hz * 50 Hz
[2] All from LCP	1-24 Motor Current
[3] Size indep. from LCP	0.01 - 100.00 A * Motortype dep.
0-51 Set-up Copy	1-25 Motor Nominal Speed
*[0] No copy	100 - 9999 rpm * Motortype dep.
[1] Copy from setup 1	1-29 Automatic Motor Tuning (AMT)
[2] Copy from setup 2	*[0] Off
[9] Copy from Factory setup	[2] Enable AMT
0-6X Password	1-3X Adv. Motor Data
0-60 (Main) Menu Password	1-30 Stator Resistance (Rs)
0 - 999 * 0	[Ohm] * Dep. on motor data
Parameter Overview	1-33 Stator Leakage Reactance (X1)
	[Ohm] * Dep. on motor data
	1-35 Main Reactance (Xh)
	[Ohm] * Dep. on motor data
	1-5X Load Indep. Setting
	1-50 Motor Magnetisation at 0 Speed
	0 - 300 % * 100 %
	1-52 Min Speed Norm. Magnet. [Hz]
	0.0 - 10.0 Hz * 0.0 Hz
	1-55 U/f Characteristic - U
	0 - 999.9 V
	1-56 U/f Characteristic - F
	0 - 400 Hz
	1-6X Load Depen. Setting
	1-60 Low Speed Load Compensation
	0 - 199 % * 100 %
	1-61 High Speed Load Compensation
	0 - 199 % * 100 %
	1-62 Slip Compensation
	-400 - 399 % * 100 %
	1-63 Slip Compensation Time Constant
	0.05 - 5.00 s * 0.10 s
	1-7X Start Adjustments
	1-71 Start Delay
	0.0 - 10.0 s * 0.0 s
	1-72 Start Function
	[0] DC hold / delay time
	[1] DC brake / delay time
	*[2] Coast / delay time
	1-73 Flying Start
	*[0] Disabled
	[1] Enabled
	1-8X Stop Adjustments
	1-80 Function at Stop
	*[0] Coast
	[1] DC hold
	1-82 Min Speed for Funct. at Stop [Hz]
	0.0 - 20.0 Hz * 0.0 Hz
	1-9X Motor Temperature
	1-90 Motor Thermal Protection
	*[0] No protection
	[1] Thermistor warning
	[2] Thermistor trip
	[3] Etr warning
	[4] Etr trip
	1-93 Thermistor Resource
	*[0] None
	3-00 Reference Range
	*[0] Min - Max
	[1] -Max - +Max
	3-02 Minimum Reference
	-4999 - 4999 * 0.000
	3-03 Maximum Reference
	-4999 - 4999 * 50.00
	3-1X References
	3-10 Preset Reference
	-100.0 - 100.0 % * 0.00 %
	3-11 Jog Speed [Hz]
	0.0 - 400.0 Hz * 5.0 Hz
	3-12 Catch up/slow Down Value
	0.00 - 100.0 % * 0.00 %
	2-00 DC Hold Current
	0 - 150 % * 50 %
	2-01 DC Brake Current
	0 - 150 % * 50 %
	2-02 DC Braking Time
	0.0 - 60.0 s * 10.0 s
	2-04 DC Brake Cut In Speed
	0.0 - 400.0 Hz * 0.0 Hz
	2-1X Brake Energy Funct.
	2-10 Brake Function
	*[0] Off
	[1] Resistor brake
	[2] AC brake
	2-11 Brake Resistor (ohm)
	5 - 5000 * 5
	2-16 AC Brake. Max current
	0 - 150 % * 100 %
	2-17 Over-voltage Control
	*[0] Disabled
	[1] Enabled (not at stop)
	[2] Enabled
	2-2* Mechanical Brake
	2-20 Release Brake Current
	0.00 - 100.0 A * 0.00 A
	2-22 Activate Brake Speed [Hz]
	0.0 - 400.0 Hz * 0.0 Hz
	3-XX Reference / Ramps
	3-00 Reference Range
	*[0] Min - Max
	[1] -Max - +Max
	3-02 Minimum Reference
	-4999 - 4999 * 0.000
	3-03 Maximum Reference
	-4999 - 4999 * 50.00
	3-1X References
	3-10 Preset Reference
	-100.0 - 100.0 % * 0.00 %
	3-11 Jog Speed [Hz]
	0.0 - 400.0 Hz * 5.0 Hz
	3-12 Catch up/slow Down Value
	0.00 - 100.0 % * 0.00 %

- 3-14 Preset Relative Reference
-100.0 - 100.0 % * 0.00 %
- 3-15 Reference Resource 1
[0] No function
*[1] Analog Input 53
[2] Analog input 60
[8] Pulse input 33
[11] Local bus ref
[21] LCP Potentiometer
- 3-16 Reference Resource 2
[0] No function
[1] Analog Input 53
*[2] Analog input 60
[8] Pulse input 33
*[11] Local bus ref
[21] LCP Potentiometer
- 3-17 Reference Resource 3
[0] No function
[1] Analog Input 53
[2] Analog input 60
[8] Pulse input 33
*[11] Local bus ref
[21] LCP Potentiometer
- 3-18 Relative Scaling Ref. Resource
*[0] No function
[1] Analog Input 53
[2] Analog input 60
[8] Pulse input 33
[11] Local bus ref
[21] LCP Potentiometer
- 3-4X Ramp 1
*[0] Linear
[2] Sine2 ramp
- 3-41 Ramp 1 Ramp up Time
0.05 - 3600 s * 3.00 s (10.00 s¹)
- 3-42 Ramp 1 Ramp Down Time
0.05 - 3600 s * 3.00 s (10.00 s¹)
- 3-5X Ramp 2
*[0] Linear
[2] Sine2 ramp
- 3-51 Ramp 2 Ramp up Time
0.05 - 3600 s * 3.00 s (10.00 s¹)
- 3-52 Ramp 2 Ramp down Time
0.05 - 3600 s * 3.00 s (10.00 s¹)
- 3-8X Other Ramps
3-80 Jog Ramp Time
0.05 - 3600 s * 3.00 s (10.00 s¹)
- 3-81 Quick Stop Ramp Time
0.05 - 3600 s * 3.00 s (10.00 s¹)
- 4-XX Limits / Warnings
4-1X Motor Limits
4-10 Motor Speed Direction
[0] Clockwise
[1] CounterClockwise
*[2] Both
- 4-12 Motor Speed Low Limit [Hz]
0.0 - 400.0 Hz * 0.0 Hz
- 4-14 Motor Speed High Limit [Hz]
0.1 - 400.0 Hz * 65.0 Hz
- 4-16 Torque Limit Motor Mode
0 - 400 % * 150 %
- 4-17 Torque Limit Generator Mode
0 - 400 % * 100 %
- 4-5X Adj. Warnings
4-50 Warning Current Low
0.00 - 100.00 A * 0.00 A
- 4-51 Warning Current High
0.00 - 100.00 A * 100.00 A
- 4-58 Missing Motor Phase Function
[0] Off
*[1] On
- 4-6X Speed Bypass
4-61 Bypass Speed From [Hz]
0.0 - 400.0 Hz * 0.0 Hz
- 4-63 Bypass Speed To [Hz]
0.0 - 400.0 Hz * 0.0 Hz
- 5-1X Digital Inputs
5-10 Terminal 18 Digital Input
[0] No function
[1] Reset
[2] Coast inverse
[3] Coast and reset inv.
[4] Quick stop inverse
[5] DC-brake inv.
[6] Stop inv
*[8] Start
[9] Latched start
[10] Reversing
[11] Start reversing
[12] Enable start forward
[13] Enable start reverse
[14] Jog
- 5-11 Terminal 19 Digital Input
See par. 5-10. * [10] Reversing
- 5-12 Terminal 27 Digital Input
See par. 5-10. * [1] Reset
- 5-13 Terminal 29 Digital Input
See par. 5-10. * [14] Jog
- 5-15 Terminal 33 Digital Input
See par. 5-10. * [16] Preset ref bit 0
[26] Precise Stop Inverse
[27] Start, Precise Stop
[32] Pulse Input
- 5-4X Relays
5-40 Function Relay
*[0] No operation
[1] Control ready
[2] Drive ready
[3] Drive ready, Remote
[4] Enable / No warning
[5] Drive running
[6] Running / No warning
[7] Run in range / No warning
[8] Run on ref / No warning
[9] Alarm
[10] Alarm or warning
[12] Out of current range
[13] Below current, low
[14] Above current, high
[21] Thermal warning
[22] Ready, No thermal warning
[23] Remote ready, No thermal warning
[24] Ready, Voltage ok
- 5-55 Terminal 33 Low Frequency
20 - 4999 Hz * 20 Hz
- 5-56 Terminal 33 High Frequency
21 - 5000 Hz * 5000 Hz
- 5-57 Term. 33 Low Ref./Feedb. Value
-4999 - 4999 * 0.000
- 5-58 Term. 33 High Ref./Feedb. Value
-4999 - 4999 * 50.000
- 6-XX Analog In/Out
6-0X Analog I/O Mode
6-00 Live Zero Timeout Time
1 - 99 s * 10 s
- 6-01 Live Zero TimeoutFunction
*[0] Off
[1] Freeze output
[2] Stop
[3] Jogging
[4] Max speed
[5] Stop and trip
- 6-1X Analog Input 1
6-10 Terminal 53 Low Voltage
0.00 - 9.99 V * 0.07 V
- 6-11 Terminal 53 High Voltage
0.01 - 10.00 V * 10.00 V
- 6-12 Terminal 53 Low Current
0.00 - 19.99 mA * 0.14 mA
- [16-18] Preset ref bit 0-2
[19] Freeze reference
[20] Freeze output
[21] Speed up
[22] Speed down
[23] Setup select bit 0
[28] Catch up
[29] Slow down
[34] Ramp bit 0
[60] Counter A (up)
[61] Counter A (down)
[62] Reset counter A
[63] Counter B (up)
[64] Counter B (down)
[65] ResetCounter B
- [25] Reverse
[26] Bus ok
[28] Brake, NoWarn
[29] Brake ready/NoFault
[30] BrakeFault (IGBT)
[32] Mech.brake control
[36] Control word bit 11
[51] Local ref. active
[52] Remote ref. active
[53] No alarm
[54] Start cmd active
[55] Running reverse
[56] Drive in hand mode
[57] Drive in auto mode
[60-63] Comparator 0-3
[70-73] Logic rule 0-3
[81] SL digital output B

¹) M4 and M5 only

6-13 Terminal 53 High Current 0.01 - 20.00 mA * 20.00 mA	6-93 Terminal 42 Output Min Scale 0.00 - 200.0 % * 0.00 %	8-9X Bus Jog / Feedback 8-94 Bus feedback 1 0x8000 - 0x7FFF * 0	8-9X Bus Jog / Feedback 8-94 Bus feedback 1 0x8000 - 0x7FFF * 0
6-14 Term. 53 Low Ref./Feedb. Value -4999 - 4999 * 0.000	6-94 Terminal 42 Output Max Scale 0.00 - 200.0 % * 100.0 %	13-XX Smart Logic 13-XX SLC Settings 13-00 SL Controller Mode *[0] Off [1] On	13-XX Smart Logic 13-XX SLC Settings 13-00 SL Controller Mode *[0] Off [1] On
6-15 Term. 53 High Ref./Feedb. Value -4999 - 4999 * 50.000	7-XX Controllers 7-20 Process CL Feedback 1 Resource *[0] NoFunction [1] Analog Input 53 [2] Analog input 60 [8] PulseInput33 [11] LocalBusRef	8-30 Protocol *[0] FC [2] Modbus	8-30 Protocol *[0] FC [2] Modbus
6-16 Terminal 53 Filter Time Constant 0.01 - 10.00 s * 0.01 s	7-3X Process PI Ctrl. 7-30 Process PI Normal/ Inverse Ctrl *[0] Normal [1] Inverse [0] Disable *[1] Enable	8-31 Address 1 - 247 * 1	8-31 Address 1 - 247 * 1
6-19 Terminal 53 mode *[0] Voltage mode [1] Current mode	7-31 Process PI Anti Windup *[0] Disable *[1] Enable	8-32 FC Port Baud Rate [0] 2400 Baud [1] 4800 Baud *[2] 9600 Baud [3] 19200 Baud [4] 38400 Baud	8-32 FC Port Baud Rate [0] 2400 Baud [1] 4800 Baud *[2] 9600 Baud [3] 19200 Baud [4] 38400 Baud
6-2X Analog Input 2 6-22 Terminal 60 Low Current 0.00 - 19.99 mA * 0.14 mA	7-32 Process PI Start Speed 0.0 - 200.0 Hz * 0.0 Hz	8-33 FC Port Parity *[0] Even Parity, 1 Stop Bit [1] Odd Parity, 1 Stop Bit [2] No Parity, 1 Stop Bit [3] No Parity, 2 Stop Bits	8-33 FC Port Parity *[0] Even Parity, 1 Stop Bit [1] Odd Parity, 1 Stop Bit [2] No Parity, 1 Stop Bit [3] No Parity, 2 Stop Bits
6-23 Terminal 60 High Current 0.01 - 20.00 mA * 20.00 mA	7-33 Process PI Proportional Gain 0.00 - 10.00 * 0.01	8-35 Minimum Response Delay 0.001-0.5 * 0.010 s	8-35 Minimum Response Delay 0.001-0.5 * 0.010 s
6-24 Term. 60 Low Ref./Feedb. Value -4999 - 4999 * 0.000	7-34 Process PI Integral Time 0.10 - 9999 s * 9999 s	8-36 Max Response Delay 0.100 - 10.00 s * 5.000 s	8-36 Max Response Delay 0.100 - 10.00 s * 5.000 s
6-25 Term. 60 High Ref./Feedb. Value -4999 - 4999 * 50.00	7-38 Process PI Feed Forward Factor 0 - 400 % * 0 %	8-5X Digital/Bus 8-50 Coasting Select [0] DigitalInput [1] Bus [2] LogicAnd *[3] LogicOr	8-5X Digital/Bus 8-50 Coasting Select [0] DigitalInput [1] Bus [2] LogicAnd *[3] LogicOr
6-26 Terminal 60 Filter Time Constant 0.01 - 10.00 s * 0.01 s	7-39 On Reference Bandwidth 0 - 200 % * 5 %	8-51 Quick Stop Select See par. 8-50 * [3] LogicOr	8-51 Quick Stop Select See par. 8-50 * [3] LogicOr
6-81 LCP potm. Low Reference -4999 - 4999 * 0.000	8-XX Comm. and Options 8-0X General Settings 8-01 Control Site *[0] Digital and ControlWord [2] ControlWord only	8-52 DC Brake Select See par. 8-50 * [3] LogicOr	8-52 DC Brake Select See par. 8-50 * [3] LogicOr
6-82 LCP potm. High Reference -4999 - 4999 * 50.00	8-02 Control Word Source [0] None *[1] FC RS485	8-53 Start Select See par. 8-50 * [3] LogicOr	8-53 Start Select See par. 8-50 * [3] LogicOr
6-9X Analog Output xx 6-90 Terminal 42 Mode *[0] 0-20 mA [1] 4-20 mA [2] Digital Output	8-03 Control Word Timeout Time 0.1 - 6500 s * 1.0 s	8-54 Reversing Select See par. 8-50 * [3] LogicOr	8-54 Reversing Select See par. 8-50 * [3] LogicOr
6-91 Terminal 42 Analog Output *[0] No operation [10] Output Frequency [11] Reference [12] Feedback [13] Motor Current [16] Power [20] Bus Reference	8-04 Control Word Timeout Function *[0] Off [1] Freeze Output [2] Stop [3] Jogging	8-55 Set-up Select See par. 8-50 * [3] LogicOr	8-55 Set-up Select See par. 8-50 * [3] LogicOr
6-92 Terminal 42 Digital Output See par. 5-40 *[0] No Operation [80] SL Digital Output A		8-56 Preset Reference Select See par. 8-50 * [3] LogicOr	8-56 Preset Reference Select See par. 8-50 * [3] LogicOr

13-1X Comparators			
13-10 Comparator Operand			
*[0] Disabled	[1] NoAction	14-22 Operation Mode	16-1X Motor Status
[1] Reference	[2] SelectSetup1	*[0] Normal Operation	16-10 Power [kW]
[2] Feedback	[3] SelectSetup2	[2] Initialisation	16-11 Power [hp]
[3] MotorSpeed	[10-17] SelectPresetRef0-7	14-26 Action At Inverter Fault	16-12 Motor Voltage [V]
[4] MotorCurrent	[18] SelectRamp1	*[0] Trip	16-13 Frequency [Hz]
[6] MotorPower	[19] SelectRamp2	[1] Warning	16-14 Motor Current [A]
[7] MotorVoltage	[22] Run	14-4X Energy Optimising	16-15 Frequency [%]
[8] DCLinkVoltage	[23] RunReverse	14-41 AEO Minimum Magnetisation	16-18 Motor Thermal [%]
[12] AnalogInput53	[24] Stop	40 - 75 % * 66 %	16-3X Drive Status
[13] AnalogInput60	[25] Qstop	15-XX Drive Information	16-30 DC Link Voltage
[18] PulseInput33	[26] DCstop	15-0X Operating Data	16-34 Heatsink Temp.
[20] AlarmNumber	[27] Coast	15-00 Operating Days	16-35 Inverter Thermal
[30] CounterA	[28] FreezeOutput	15-01 Running Hours	16-36 Inv.Nom. Current
[31] CounterB	[29] StartTimer0	15-02 kWh Counter	16-37 Inv. Max. Current
13-11 Comparator Operator	[30] StartTimer1	15-03 Power Ups	16-38 SL Controller State
[0] Less Than	[31] StartTimer2	15-04 Over Temps	16-5X Ref. / Feedb.
*[1] Approximately equals	[32] Set Digital Output A Low	15-05 Over Volts	16-50 External Reference
[2] Greater Than	[33] Set Digital Output B Low	15-06 Reset kWh Counter	16-51 Pulse Reference
13-12 Comparator Value	[38] Set Digital Output A High	*[0] Do not reset	16-52 Feedback [Unit]
-9999 - 9999 * 0.0	[39] Set Digital Output B High	[1] Reset counter	16-6X Inputs / Outputs
13-2X Timers	[60] ResetCounterA	15-07 Reset Running Hours Counter	16-60 Digital Input 18,19,27,33
13-20 SL Controller Timer	[61] ResetCounterB	*[0] Do not reset	0 - 1111
0.0 - 3600 s * 0.0 s	14-XX Special Functions	[1] Reset counter	16-61 Digital Input 29
13-4X Logic Rules	14-0X Inverter Switching	15-3X Fault Log	0 - 1
13-40 Logic Rule Boolean 1	14-01 Switching Frequency	15-30 Fault Log: Error Code	16-62 Analog Input 53 (volt)
See par. 13-01 * [0] False	[0] 2 kHz	15-4X Drive Identification	16-63 Analog Input 53 (current)
[30] - [32] SL Time-out 0-2	*[1] 4 kHz	15-40 FC Type	16-64 Analog Input 60
13-41 Logic Rule Operator 1	[2] 8 kHz	15-41 Power Section	16-65 Analog Output 42 [mA]
*[0] Disabled	[4] 16 kHz	15-42 Voltage	16-68 Pulse Input [Hz]
[1] And	14-03 Overmodulation	15-43 Software Version	16-71 Relay Output [bin]
[2] Or	[0] Off	15-46 Frequency Converter Order. No	16-72 Counter A
[3] And not	*[1] On	15-48 LCP Id No	16-73 Counter B
[4] Or not	14-1X Mains monitoring	15-51 Frequency Converter Serial No	16-8X Fieldbus / FC Port
[5] Not and	14-12 Function at mains imbalance	16-XX Data Readouts	16-86 FC Port REF 1
[6] Not or	*[0] Trip	16-0X General Status	0x8000 - 0x7FFFF
[7] Not and not	[1] Warning	16-00 Control Word	16-9X Diagnosis Readouts
[8] Not or not	[2] Disabled	0 - 0XFFFF	16-90 Alarm Word
13-42 Logic Rule Boolean 2	14-2X Trip Reset	16-01 Reference [Unit]	0 - 0XFFFFFFF
See par. 13-40 * [0] False	14-20 Reset Mode	-4999 - 4999 * 0.000	16-92 Warning Word
13-43 Logic Rule Operator 2	*[0] Manual reset	16-02 Reference %	0 - 0XFFFFFFF
See par. 13-41 * [0] Disabled	[1-9] AutoReset 1-9	-200.0 - 200.0 % * 0.0%	16-94 Ext. Status Word
13-44 Logic Rule Boolean 3	[10] AutoReset 10	16-03 Status Word	0 - 0XFFFFFFF
See par. 13-40 * [0] False	[11] AutoReset 15	16-05 Main Actual Value [%]	18-8X Motor Resistors
13-5X States	[12] AutoReset 20	-200.0 - 200.0 % * 0.0%	18-80 Stator Resistance (High resolution)
13-51 SL Controller Event	[13] Infinite auto reset	16-09 Custom Readout	0.000 - 99.990 ohm * 0.000 ohm
See par. 13-40 * [0] False	14-21 Automatic Restart Time	Dep. on par. 0-31, 0-32 and 4-14	18-81 Stator Leakage Reactance(High resolution)
13-52 SL Controller Action	0 - 600 s * 10 s		0.000 - 99.990 ohm * 0.000 ohm
*[0] Disabled			

1

1.6 Troubleshooting

No.	Description	Warning	Alarm	Trip Lock	Error	Cause of Problem
2	Live zero error	X	X			Signal on terminal 53 or 60 is less than 50% of value set in par. 6-10, 6-12 and 6-22.
4	Mains phase loss ¹⁾	X	X	X		Missing phase on supply side, or too high voltage imbalance. Check supply voltage.
7	DC over voltage ¹⁾	X	X			Intermediate circuit voltage exceeds limit.
8	DC under voltage ¹⁾	X	X			Intermediate circuit voltage drops below "voltage warning low" limit.
9	Inverter overloaded	X	X			More than 100% load for too long.
10	Motor ETR over temperature	X	X			Motor is too hot due to more than 100% load for too long.
11	Motor thermistor over temperature	X	X			Thermistor or thermistor connection is disconnected.
12	Torque limit	X				Torque exceeds value set in either par. 4-16 or 4-17.
13	Over Current	X	X	X		Inverter peak current limit is exceeded.
14	Earth fault		X	X		Discharge from output phases to ground.
16	Short Circuit		X	X		Short-circuit in motor or on motor terminals.
17	Control word timeout	X	X			No communication to frequency converter.
25	Brake resistor short-circuited		X	X		Brake resistor is short-circuited, thus brake function is disconnected.
27	Brake chopper short-circuited		X	X		Brake transistor is short-circuited, thus brake function is disconnected.
28	Brake check		X			Brake resistor is not connected/working
29	Power board over temp	X	X	X		Heat-sink cut-out temperature has been reached.
30	Motor phase U missing		X	X		Motor phase U is missing. Check the phase.
31	Motor phase V missing		X	X		Motor phase V is missing. Check the phase.
32	Motor phase W missing		X	X		Motor phase W is missing. Check the phase.
38	Internal fault		X	X		Contact local Danfoss supplier.
44	Earth fault		X	X		Discharge from output phases to ground.
47	Control Voltage Fault		X	X		24 V DC may be overloaded.
51	AMT check U_{nom} and I_{nom}		X			Wrong setting for motor voltage and/or motor current.
52	AMT low I_{nom}		X			Motor current is too low. Check settings.
59	Current limit	X				VLT overload.
63	Mechanical Brake Low		X			Actual motor current has not exceeded "release brake" current within "start delay" time window.
80	Drive Initialised to Default Value		X			All parameter settings are initialized to default settings.
84	The connection between drive and LCP is lost				X	No communication between LCP and frequency converter
85	Button disabled				X	See parameter group 0-4* <i>LCP</i>
86	Copy fail				X	An error occurred while copying from frequency converter to LCP or vice versa.
87	LCP data invalid				X	Occurs when copying from LCP if the LCP contains erroneous data - or if no data was uploaded to the LCP.
88	LCP data not compatible				X	Occurs when copying from LCP if data are moved between frequency converters with major differences in software versions.
89	Parameter read only				X	Occurs when trying to write to a read-only parameter.
90	Parameter database busy				X	LCP and RS485 connection are trying to update parameters simultaneously.
91	Parameter value is not valid in this mode				X	Occurs when trying to write an illegal value to a parameter.
92	Parameter value exceeds the min/max limits				X	Occurs when trying to set a value outside the range.
nw run	Not While RUNNING				X	Parameter can only be changed when the motor is stopped.
Err.	A wrong password was entered				X	Occurs when using a wrong password for changing a password-protected parameter.

¹⁾ These faults may be caused by mains distortions. Installing Danfoss Line Filter may rectify this problem.

Table 1.6: Warnings and AlarmsCode list

1.7 Specifications

1.7.1 Mains Supply 1 x 200 - 240 VAC

Normal overload 150% for 1 minute

Frequency converter	PK18	PK37	PK75	P1K5	P2K2
Typical Shaft Output [kW]	0.18	0.37	0.75	1.5	2.2
Typical Shaft Output [HP]	0.25	0.5	1	2	3
IP 20	Frame M1	Frame M1	Frame M1	Frame M2	Frame M3

Output current

	Continuous (1 x 200-240 V) [A]	1.2	2.2	4.2	6.8	9.6
	Intermittent (1 x 200-240 V) [A]	1.8	3.3	6.3	10.2	14.4
	Max. cable size:					
	(mains, motor) [mm ² /AWG]	4/10				

Max. input current

	Continuous (1 x 200-240 V) [A]	3.3	6.1	11.6	18.7	26.4
	Intermittent (1 x 200-240 V) [A]	4.5	8.3	15.6	26.4	37.0
	Max. mains fuses [A]	See Section <i>Fuses</i>				
	Environment					
	Estimated power loss [W], Best case/ Typical ¹⁾	12.5/ 15.5	20.0/ 25.0	36.5/ 44.0	61.0/ 67.0	81.0/ 85.1
	Weight enclosure IP20 [kg]	1.1	1.1	1.1	1.6	3.0
	Efficiency [%], Best case/Typical ¹⁾	95.6/ 94.5	96.5/ 95.6	96.6/ 96.0	97.0/ 96.7	96.9/ 97.1

Table 1.7: Mains supply 1 x 200 - 240 VAC

1. At rated load conditions.

1.7.2 Mains Supply 3 x 200 - 240 VAC

Normal overload 150% for 1 minute

Frequency converter	PK25	PK37	PK75	P1K5	P2K2	P3K7
Typical Shaft Output [kW]	0.25	0.37	0.75	1.5	2.2	3.7
Typical Shaft Output [HP]	0.33	0.5	1	2	3	5
IP 20	Frame M1	Frame M1	Frame M1	Frame M2	Frame M3	Frame M3

Output current

	Continuous (3 x 200-240 V) [A]	1.5	2.2	4.2	6.8	9.6	15.2
	Intermittent (3 x 200-240 V) [A]	2.3	3.3	6.3	10.2	14.4	22.8
	Max. cable size:						
	(mains, motor) [mm ² /AWG]	4/10					

Max. input current

	Continuous (3 x 200-240 V) [A]	2.4	3.5	6.7	10.9	15.4	24.3
	Intermittent (3 x 200-240 V) [A]	3.2	4.6	8.3	14.4	23.4	35.3
	Max.mains fuses [A]	See Section <i>Fuses</i>					
	Environment						
	Estimated power loss [W], Best case/ Typical ¹⁾	14.0/ 20.0	19.0/ 24.0	31.5/ 39.5	51.0/ 57.0	72.0/ 77.1	115.0/ 122.8
	Weight enclosure IP20 [kg]	1.1	1.1	1.1	1.6	3.0	3.0
	Efficiency [%], Best case/Typical ¹⁾	96.4/ 94.9	96.7/ 95.8	97.1/ 96.3	97.4/ 97.2	97.2/ 97.4	97.3/ 97.4

Table 1.8: Mains supply 3 x 200 - 240 VAC

1. At rated load conditions.

1.7.3 Mains Supply 3 x 380 - 480 VAC

1

Normal overload 150% for 1 minute

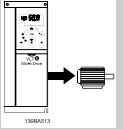
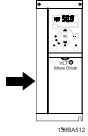
Frequency converter	PK37	PK75	P1K5	P2K2	P3K0	P4K0	
Typical Shaft Output [kW]	0.37	0.75	1.5	2.2	3.0	4.0	
Typical Shaft Output [HP]	0.5	1	2	3	4	5	
IP 20	Frame M1	Frame M1	Frame M2	Frame M2	Frame M3	Frame M3	
Output current							
	Continuous (3 x 380-440 V) [A]	1.2	2.2	3.7	5.3	7.2	9.0
	Intermittent (3 x 380-440 V) [A]	1.8	3.3	5.6	8.0	10.8	13.7
	Continuous (3 x 440-480 V) [A]	1.1	2.1	3.4	4.8	6.3	8.2
	Intermittent (3 x 440-480 V) [A]	1.7	3.2	5.1	7.2	9.5	12.3
	Max. cable size: (mains, motor) [mm ² / AWG]						4/10
Max. input current							
	Continuous (3 x 380-440 V) [A]	1.9	3.5	5.9	8.5	11.5	14.4
	Intermittent (3 x 380-440 V) [A]	2.6	4.7	8.7	12.6	16.8	20.2
	Continuous (3 x 440-480 V) [A]	1.7	3.0	5.1	7.3	9.9	12.4
	Intermittent (3 x 440-480 V) [A]	2.3	4.0	7.5	10.8	14.4	17.5
	Max. mains fuses [A]	See Section <i>Fuses</i>					
Environment							
Estimated power loss [W], Best case/ Typical ¹⁾	18.5/ 25.5	28.5/ 43.5	41.5/ 56.5	57.5/ 81.5	75.0/ 101.6	98.5/ 133.5	
Weight enclosure IP20 [kg]	1.1	1.1	1.6	1.6	3.0	3.0	
Efficiency [%], Best case/ Typical ¹⁾	96.8/ 95.5	97.4/ 96.0	98.0/ 97.2	97.9/ 97.1	98.0/ 97.2	98.0/ 97.3	

Table 1.9: Mains supply 3 x 380 - 480 VAC

1. At rated load conditions.

Normal overload 150% for 1 minute

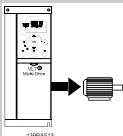
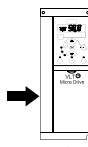
Frequency converter	P5K5	P7K5	P11K	P15K	P18K	P22K	
Typical Shaft Output [kW]	5.5	7.5	11	15	18.5	22	
Typical Shaft Output [HP]	7.5	10	15	20	25	30	
IP 20	Frame M3	Frame M3	Frame M4	Frame M4	Frame M5	Frame M5	
Output current							
	Continuous (3 x 380-440 V) [A]	12.0	15.5	23.0	31.0	37.0	43.0
	Intermittent (3 x 380-440 V) [A]	18.0	23.5	34.5	46.5	55.5	64.5
	Continuous (3 x 440-480 V) [A]	11.0	14.0	21.0	27.0	34.0	40.0
	Intermittent (3 x 440-480 V) [A]	16.5	21.3	31.5	40.5	51.0	60.0
	Max. cable size: (mains, motor) [mm ² / AWG]	4/10		16/6			
Max. input current							
	Continuous (3 x 380-440 V) [A]	19.2	24.8	33.0	42.0	34.7	41.2
	Intermittent (3 x 380-440 V) [A]	27.4	36.3	47.5	60.0	49.0	57.6
	Continuous (3 x 440-480 V) [A]	16.6	21.4	29.0	36.0	31.5	37.5
	Intermittent (3 x 440-480 V) [A]	23.6	30.1	41.0	52.0	44.0	53.0
	Max. mains fuses [A]	See Section <i>Fuses</i>					
Environment							
Estimated power loss [W], Best case/ Typical ¹⁾	131.0/ 166.8	175.0/ 217.5	290.0/ 342.0	387.0/ 454.0	395.0/ 428.0	467.0/ 520.0	
Weight enclosure IP20 [kg]	3.0	3.0					
Efficiency [%], Best case/ Typical ¹⁾	98.0/ 97.5	98.0/ 97.5	97.8/ 97.4	97.7/ 97.4	98.1/ 98.0	98.1/ 97.9	

Table 1.10: Mains supply 3 x 380 - 480 VAC

1. At rated load conditions.

Protection and Features:

- Electronic thermal motor protection against overload.
- Temperature monitoring of the heatsink ensures that the frequency converter trips in case of overtemperature
- The frequency converter is protected against short-circuits between motor terminals U, V, W.
- If a motor phase is missing, the frequency trips and issues an alarm.
- If a mains phase is missing, the frequency converter trips or issues a warning (depending on the load).
- Monitoring of the intermediate circuit voltage ensures that the frequency converter trips if the intermediate circuit voltage is too low or too high.
- The frequency converter is protected against earth faults on motor terminals U, V, W.

Mains supply (L1/L, L2, L3/N):

Supply voltage	200-240 V $\pm 10\%$
Supply voltage	380-480 V $\pm 10\%$
Supply frequency	50/60 Hz
Max. imbalance temporary between mains phases	3.0 % of rated supply voltage
True Power Factor (λ)	≥ 0.4 nominal at rated load
Displacement Power Factor ($\cos\phi$) near unity	(> 0.98)
Switching on input supply L1/L, L2, L3/N (power-ups)	maximum 2 times/min.
Environment according to EN60664-1	overvoltage category III/pollution degree 2

The unit is suitable for use on a circuit capable of delivering not more than 100.000 RMS symmetrical Amperes, 240/480 V maximum.

Motor output (U, V, W):

Output voltage	0 - 100% of supply voltage
Output frequency	0-200 Hz (VVC+), 0-400 Hz (u/f)
Switching on output	Unlimited
Ramp times	0.05 - 3600 sec.

Cable lengths and cross sections:

Max. motor cable length, screened/armoured (EMC correct installation)	15 m
Max. motor cable length, unscreened/unarmoured	50 m
Max. cross section to motor, mains*	
Connection to load sharing/brake (M1, M2, M3)	6.3 mm insulated Faston Plugs
Max. cross section to load sharing/brake (M4, M5)	16 mm ² /6AWG
Maximum cross section to control terminals, rigid wire	1.5 mm ² /16 AWG (2 x 0.75 mm ²)
Maximum cross section to control terminals, flexible cable	1 mm ² /18 AWG
Maximum cross section to control terminals, cable with enclosed core	0.5 mm ² /20 AWG
Minimum cross section to control terminals	0.25 mm ²

** See tables for mains supply for more information!*

Digital inputs (Pulse/encoder inputs):

Programmable digital inputs (Pulse/encoder)	5 (1)
Terminal number	18, 19, 27, 29, 33,
Logic	PNP or NPN
Voltage level	0 - 24 V DC
Voltage level, logic '0' PNP	< 5 V DC
Voltage level, logic '1' PNP	> 10 V DC
Voltage level, logic '0' NPN	> 19 V DC
Voltage level, logic '1' NPN	< 14 V DC
Maximum voltage on input	28 V DC
Input resistance, R _i	approx. 4 k
Max. pulse frequency at terminal 33	5000 Hz
Min. pulse frequency at terminal 33	20 Hz

Analog inputs:

Number of analog inputs	2
Terminal number	53, 60
Voltage mode (Terminal 53)	Switch S200=OFF(U)

1

Current mode (Terminal 53 and 60)	Switch S200=ON(I)
Voltage level	0 -10 V
Input resistance, R_i	approx. 10 k Ω
Max. voltage	20 V
Current level	0/4 to 20 mA (scaleable)
Input resistance, R_i	approx. 200 Ω
Max. current	30 mA
Analog output:	
Number of programmable analog outputs	1
Terminal number	42
Current range at analog output	0/4 - 20 mA
Max. load to common at analog output	500 Ω
Max. voltage at analog output	17 V
Accuracy on analog output	Max. error: 0.8 % of full scale
Resolution on analog output	8 bit
Control card, RS-485 serial communication:	
Terminal number	68 (P,TX+, RX+), 69 (N,TX-, RX-)
Terminal number 61	Common for terminals 68 and 69
Control card, 24 V DC output:	
Terminal number	12
Max. load (M1 and M2)	160 mA
Max. load (M3)	30 mA
Max. load (M4 and M5)	200 mA
Relay output:	
Programmable relay output	1
Relay 01 Terminal number	01-03 (break), 01-02(make)
Max. terminal load (AC-1) ¹⁾ on 01-02 (NO) (Resistive load)	250 V AC, 2 A
Max. terminal load (AC-15) ¹⁾ on 01-02 (NO) (Inductive load @ cos ϕ 0.4)	250 V AC, 0.2 A
Max. terminal load (DC-1) ¹⁾ on 01-02 (NO) (Resistive load)	30 V DC, 2 A
Max. terminal load (DC-13) ¹⁾ on 01-02 (NO) (Inductive load)	24 V DC, 0.1A
Max. terminal load (AC-1) ¹⁾ on 01-03 (NC) (Resistive load)	250 V AC, 2 A
Max. terminal load (AC-15) ¹⁾ on 01-03 (NC) (Inductive load @ cos ϕ 0.4)	250 V AC, 0.2A
Max. terminal load (DC-1) ¹⁾ on 01-03 (NC) (Resistive load)	30 V DC, 2 A
Min. terminal load on 01-03 (NC), 01-02 (NO)	24 V DC 10 mA, 24 V AC 20 mA
Environment according to EN 60664-1	overvoltage category III/pollution degree 2
<i>1) IEC 60947 part 4 and 5</i>	
Control card, 10 V DC output:	
Terminal number	50
Output voltage	10.5 V \pm 0.5 V
Max. load	25 mA



All inputs, outputs, circuits, DC supplies and relay contacts are galvanically isolated from the supply voltage (PELV) and other high-voltage terminals.

Surroundings:

Enclosure	IP 20
Enclosure kit available	IP 21, TYPE 1
Vibration test	1.0 g
Max. relative humidity	5% - 95%(IEC 60721-3-3; Class 3K3 (non-condensing) during operation
Aggressive environment (IEC 60721-3-3), coated	class 3C3
Test method according to IEC 60068-2-43 H2S (10 days)	
Ambient temperature	Max. 40 °C

Derating for high ambient temperature, see section on special conditions

Minimum ambient temperature during full-scale operation	0 °C
Minimum ambient temperature at reduced performance	- 10 °C
Temperature during storage/transport	-25 - +65/70 °C
Maximum altitude above sea level without derating	1000 m
Maximum altitude above sea level with derating	3000 m

Derating for high altitude, see section on special conditions

Safety standards	EN/IEC 61800-5-1, UL 508C
EMC standards, Emission	EN 61800-3, EN 61000-6-3/4, EN 55011, IEC 61800-3
EMC standards, Immunity	EN 61800-3, EN 61000-6-1/2, EN 61000-4-2, EN 61000-4-3, EN 61000-4-4, EN 61000-4-5, EN 61000-4-6

See section on special conditions

1

1.8 Special Conditions

1.8.1 Derating for Ambient Temperature

The ambient temperature measured over 24 hours should be at least 5 °C lower than the max. ambient temperature.

If the frequency converter is operated at high ambient temperature, the continuous output current should be decreased.

The frequency converter has been designed for operation at max 50 °C ambient temperature with one motor size smaller than nominal. Continuous operation at full load at 50 °C ambient temperature will reduce the lifetime of the frequency converter.

1.8.2 Derating for Low Air Pressure

The cooling capability of air is decreased at low air pressure.

For altitudes above 2000 m, please contact Danfoss regarding PELV.

Below 1000 m altitude no de-rating is necessary but above 1000 m the ambient temperature or the maximum output current should be decreased.

Decrease the output by 1% per 100 m altitude above 1000 m or reduce the max. ambient temperature by 1 degree per 200 m

1.8.3 Derating for Running at Low Speeds

When a motor is connected to a frequency converter, it is necessary to check that the cooling of the motor is adequate. A problem may occur at low speeds in constant torque applications. Running continuously at low speeds – below half the nominal motor speed – may require additional air cooling. Alternatively, choose a larger motor (one size up).

1

1.9 Options for VLT Micro Drive

Ordering No	Description
132B0100	VLT Control Panel LCP 11 w/o potentiometer
132B0101	VLT Control Panel LCP 12 with potentiometer
132B0102	Remote Mounting Kit for LCP incl. 3 m cable IP55 with LCP 11, IP21 with LCP 12
132B0103	Nema Type 1 kit for M1 frame
132B0104	Type 1 kit for M2 frame
132B0105	Type 1 kit for M3 frame
132B0106	De-coupling plate kit for M1 and M2 frames
132B0107	De-coupling plate kit for M3 frame
132B0108	IP21 for M1 frame
132B0109	IP21 for M2 frame
132B0110	IP21 for M3 frame
132B0111	DIN rail mounting kit for M1 frame
132B0120	Type 1 kit for M4 frame
132B0121	Type 1 kit for M5 frame
132B0122	De-coupling plate kit for M4 and M5 frames

Danfoss Line Filters and brake resistors are available upon request.